

Matrix provided by WP

Sending card


To LED cabinet

TO PC USB

If the 615S has 2 sending card , please connect both DVI and both USB serial (if you have only one serial please program one side then the other .

Windows PC or LAPTOP is needed to Install the SETUP Programing , please run NOVASTAR LCT from the USB Provided .



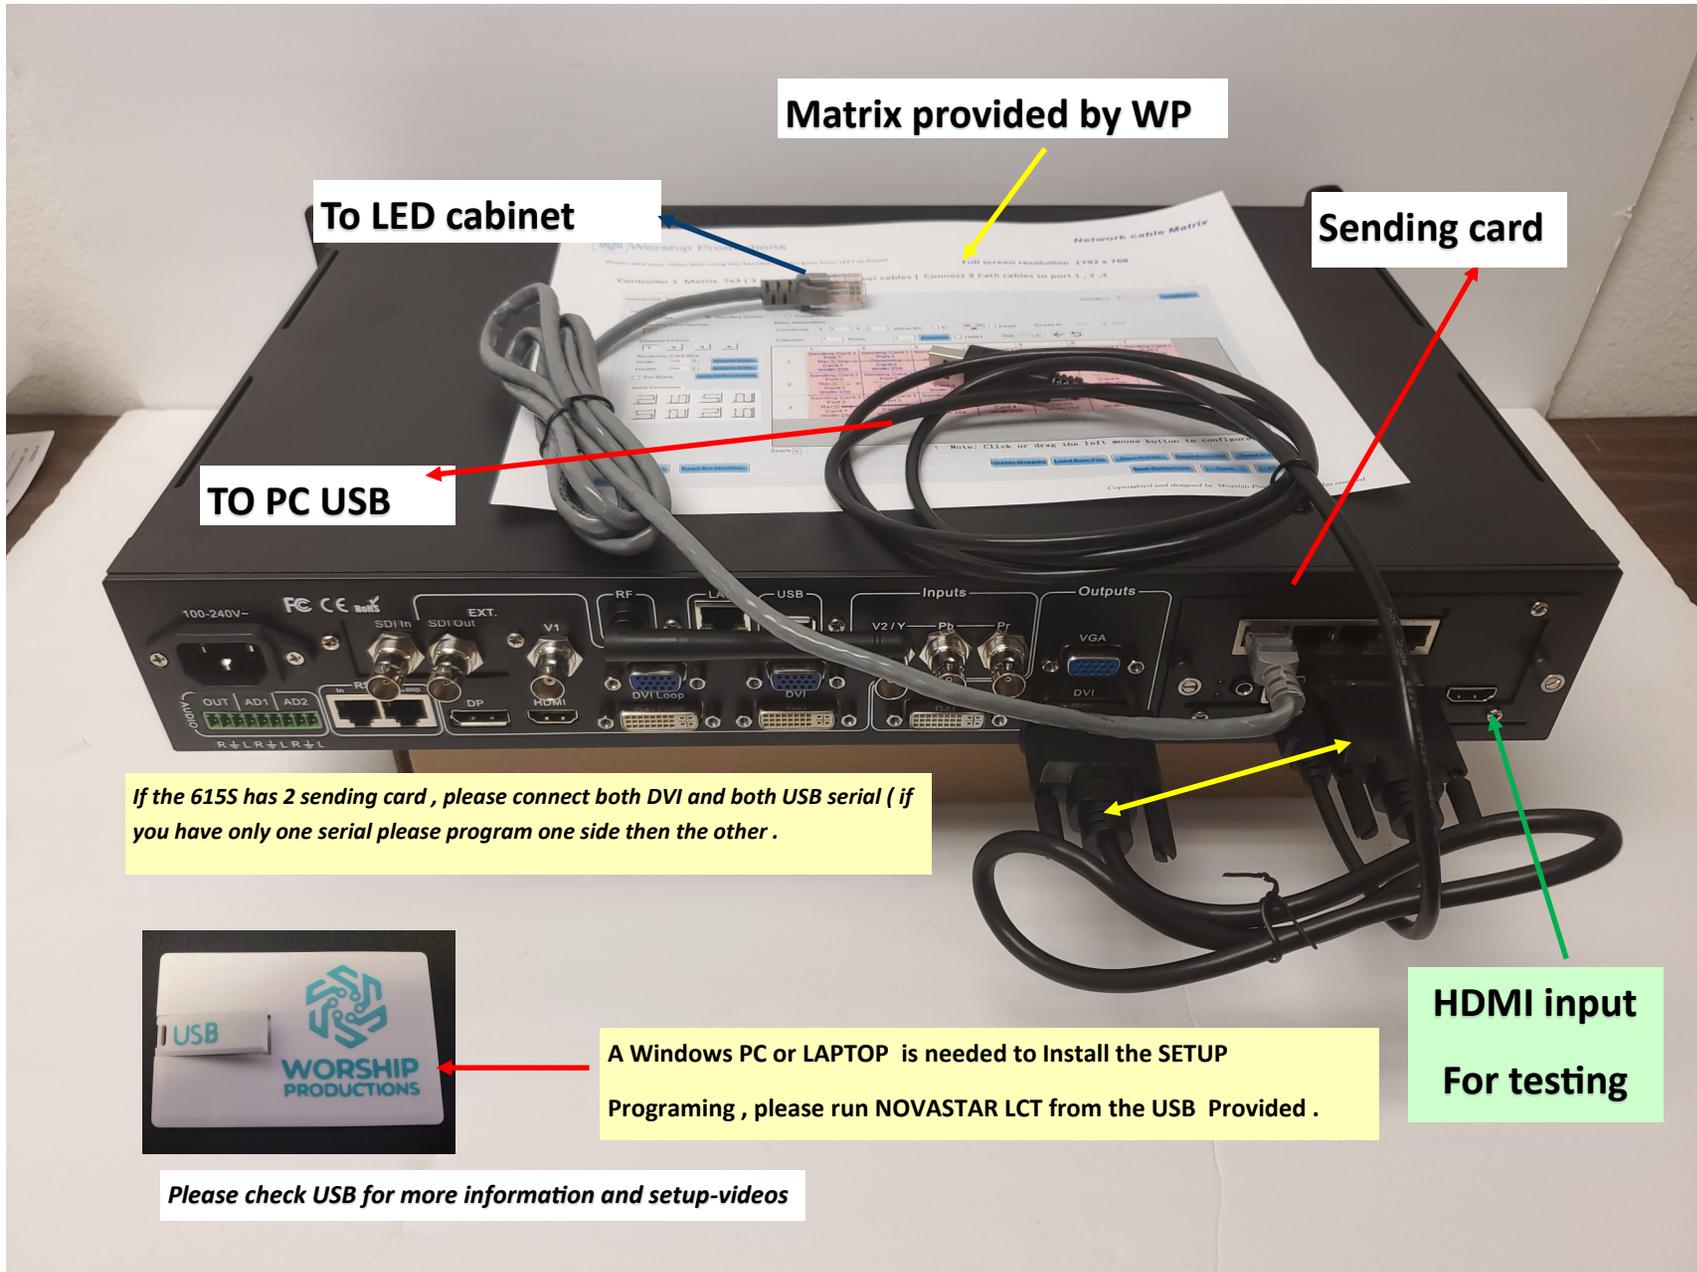

If the 615S has 2 sending card, please connect both DVI and both USB serial (if you have only one serial please program one side then the other).




A Windows PC or LAPTOP is needed to Install the SETUP Programing, please run NOVASTAR LCT from the USB Provided.

Please check USB for more information and setup-videos



This package programing require 1 screen

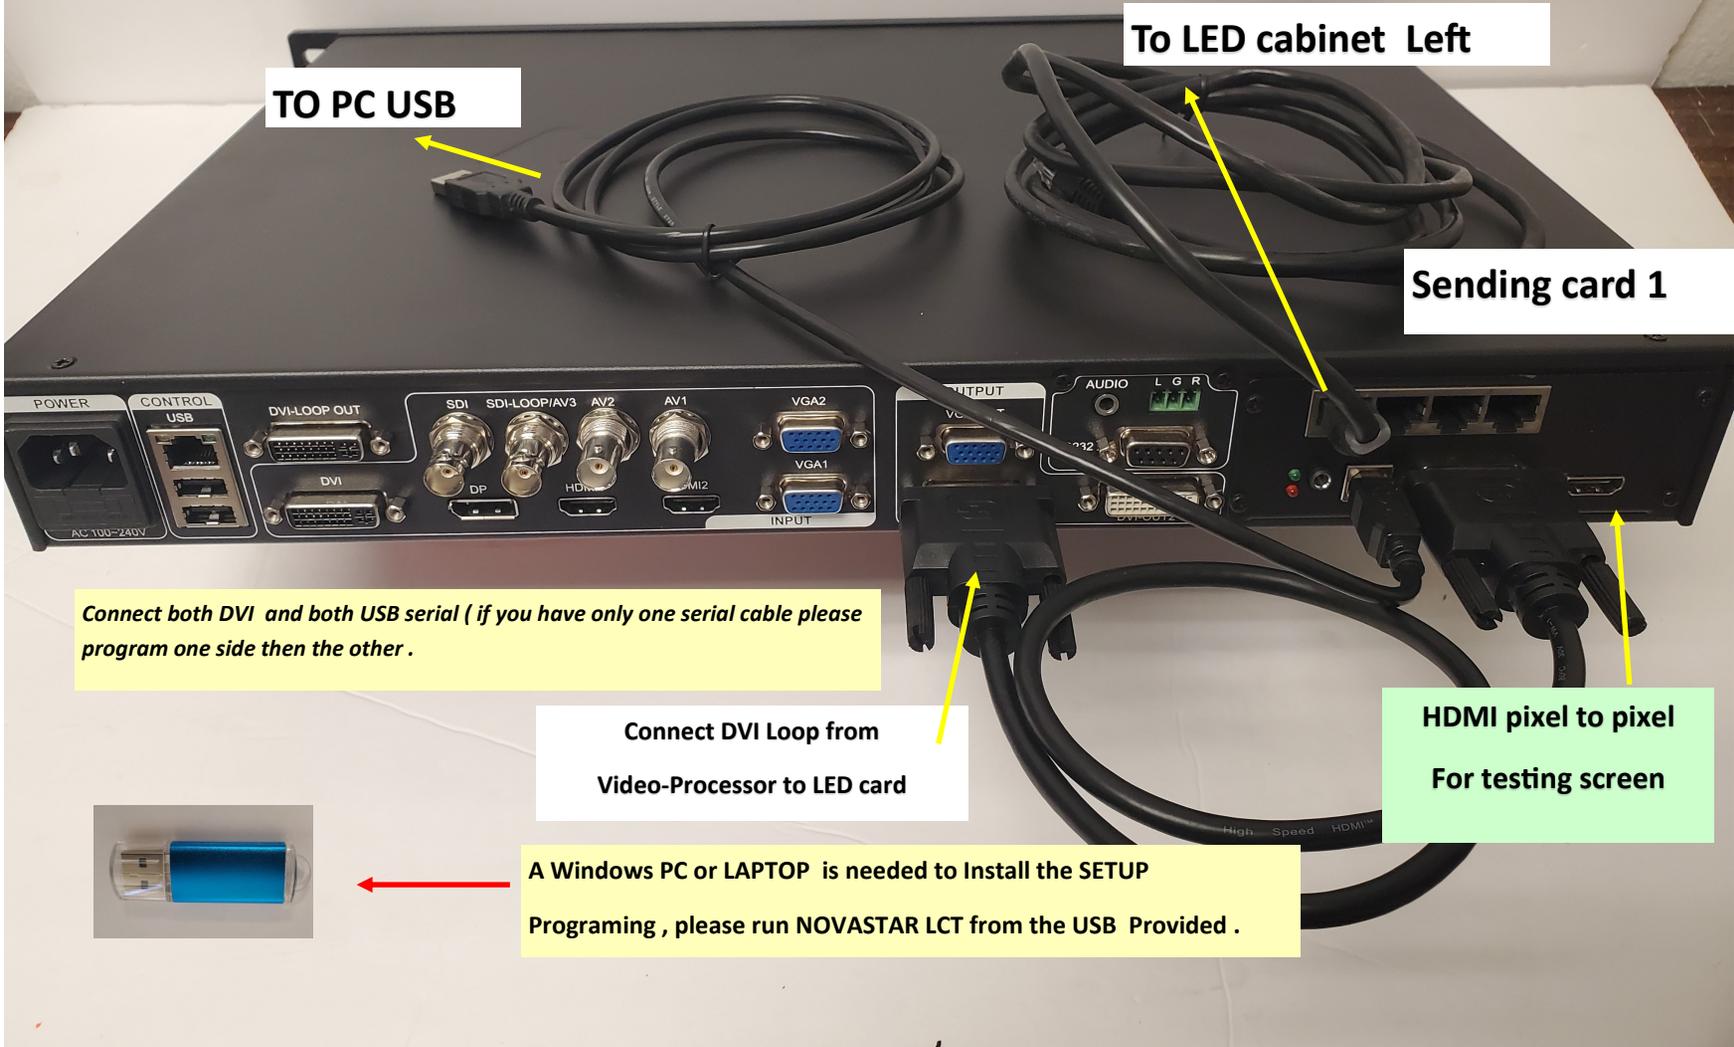

TO PC USB

To LED cabinet Left

Sending card 1


Connect both DVI and both USB serial (if you have only one serial cable please program one side then the other .

Connect DVI Loop from Video-Processor to LED card

HDMI pixel to pixel For testing screen



A Windows PC or LAPTOP is needed to Install the SETUP Programing , please run NOVASTAR LCT from the USB Provided .

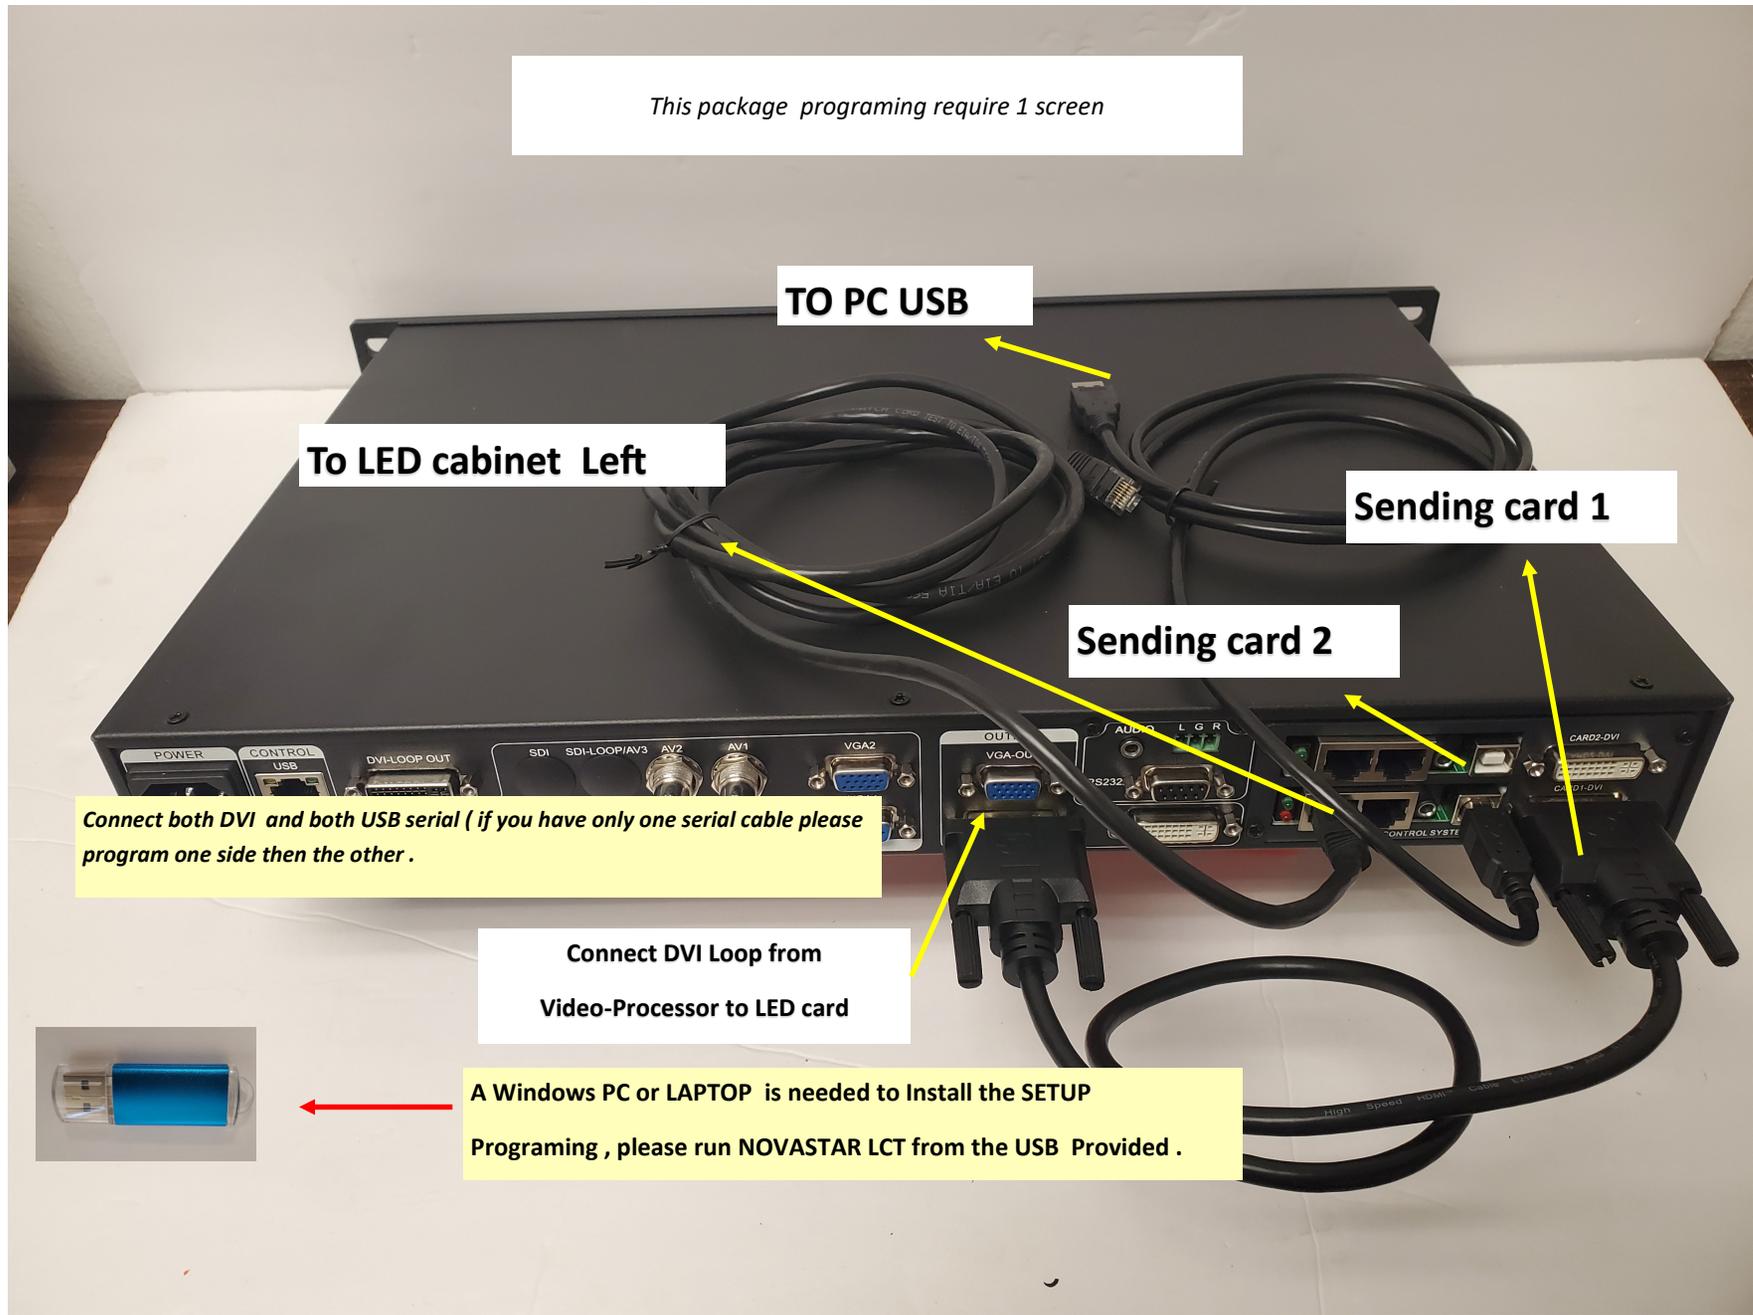

This package programing require 1 screen

TO PC USB

To LED cabinet Left

Sending card 1


Sending card 2

Connect both DVI and both USB serial (if you have only one serial cable please program one side then the other .

Connect DVI Loop from Video-Processor to LED card

A Windows PC or LAPTOP is needed to Install the SETUP Programing , please run NOVASTAR LCT from the USB Provided .



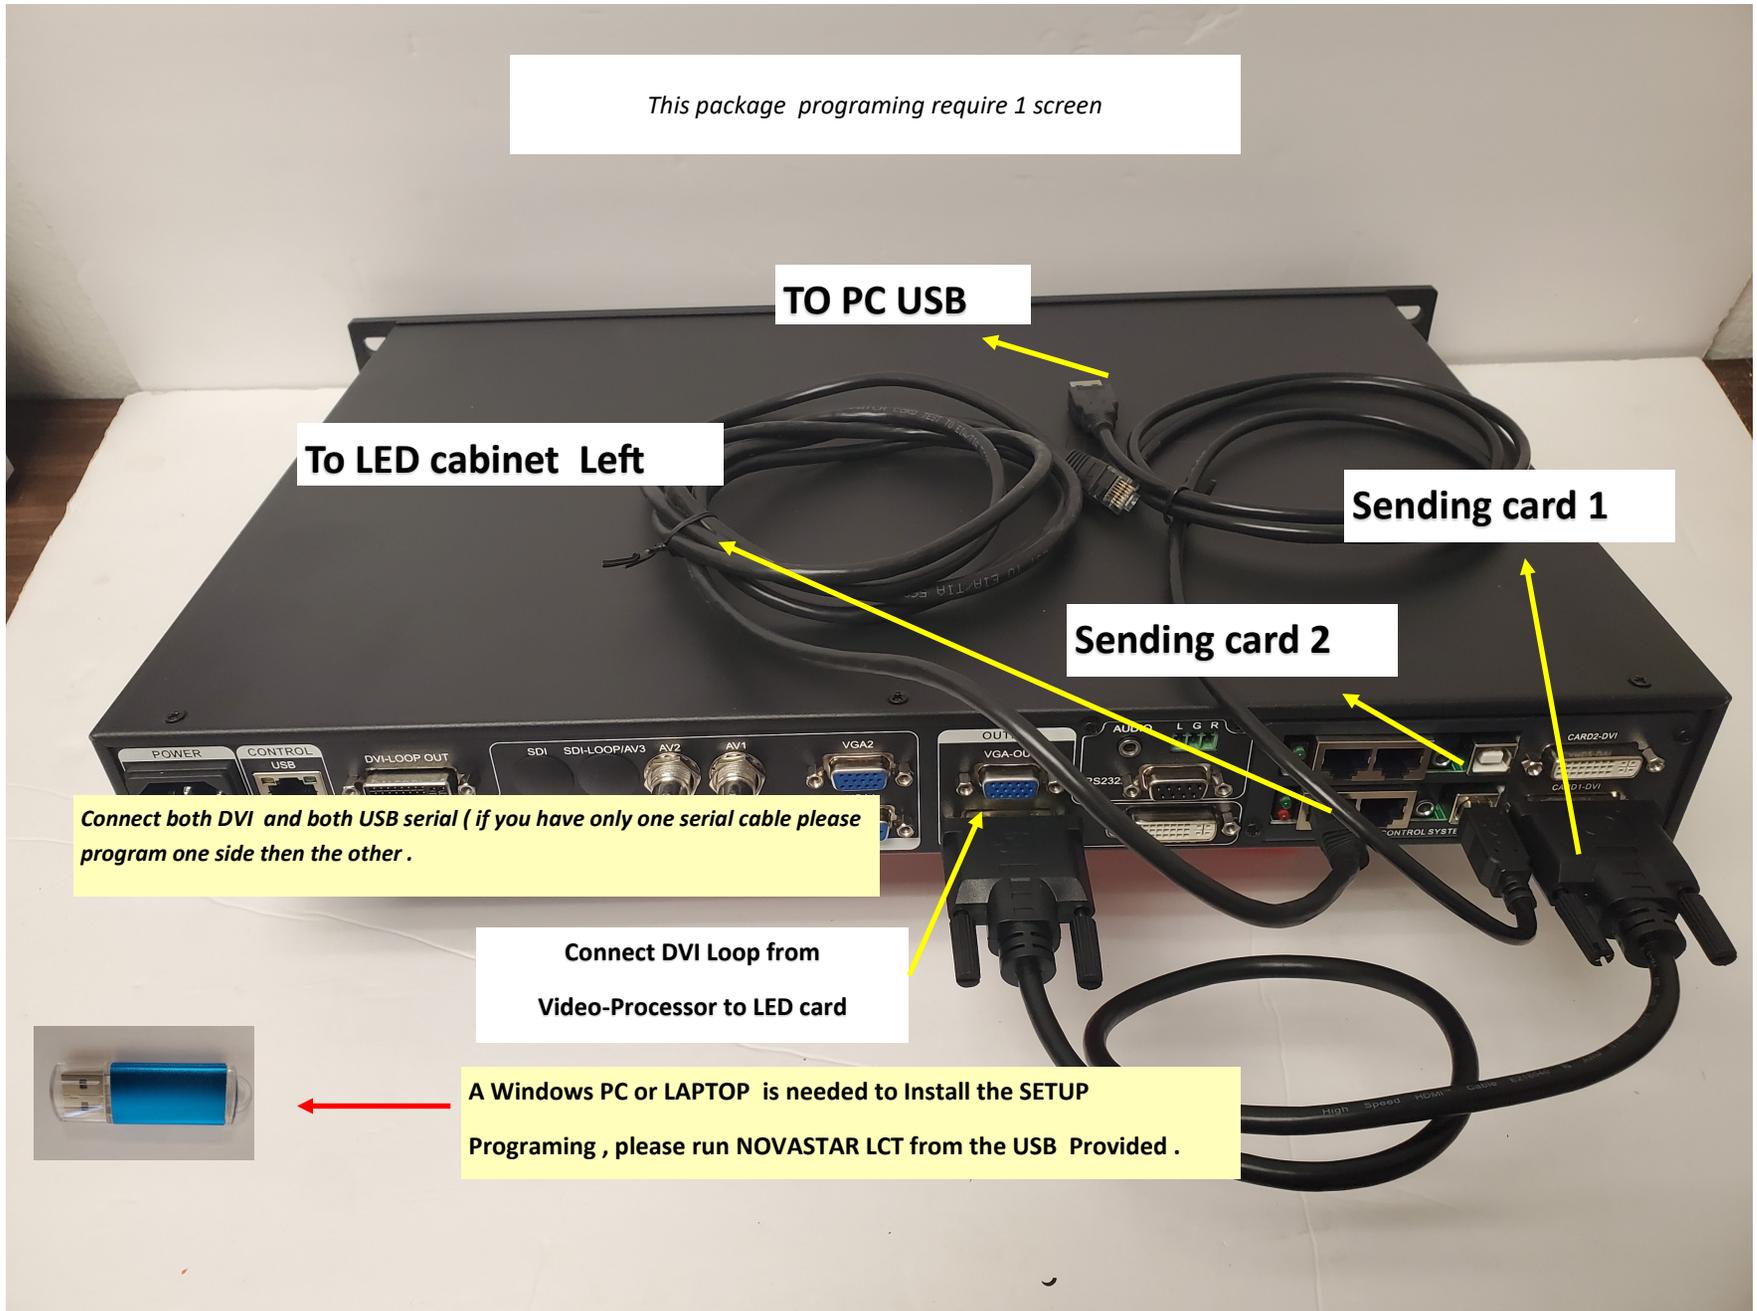

This package programing require 1 screen

TO PC USB

To LED cabinet Left

Sending card 1


Sending card 2

Connect both DVI and both USB serial (if you have only one serial cable please program one side then the other .

Connect DVI Loop from Video-Processor to LED card

A Windows PC or LAPTOP is needed to Install the SETUP Programing , please run NOVASTAR LCT from the USB Provided .



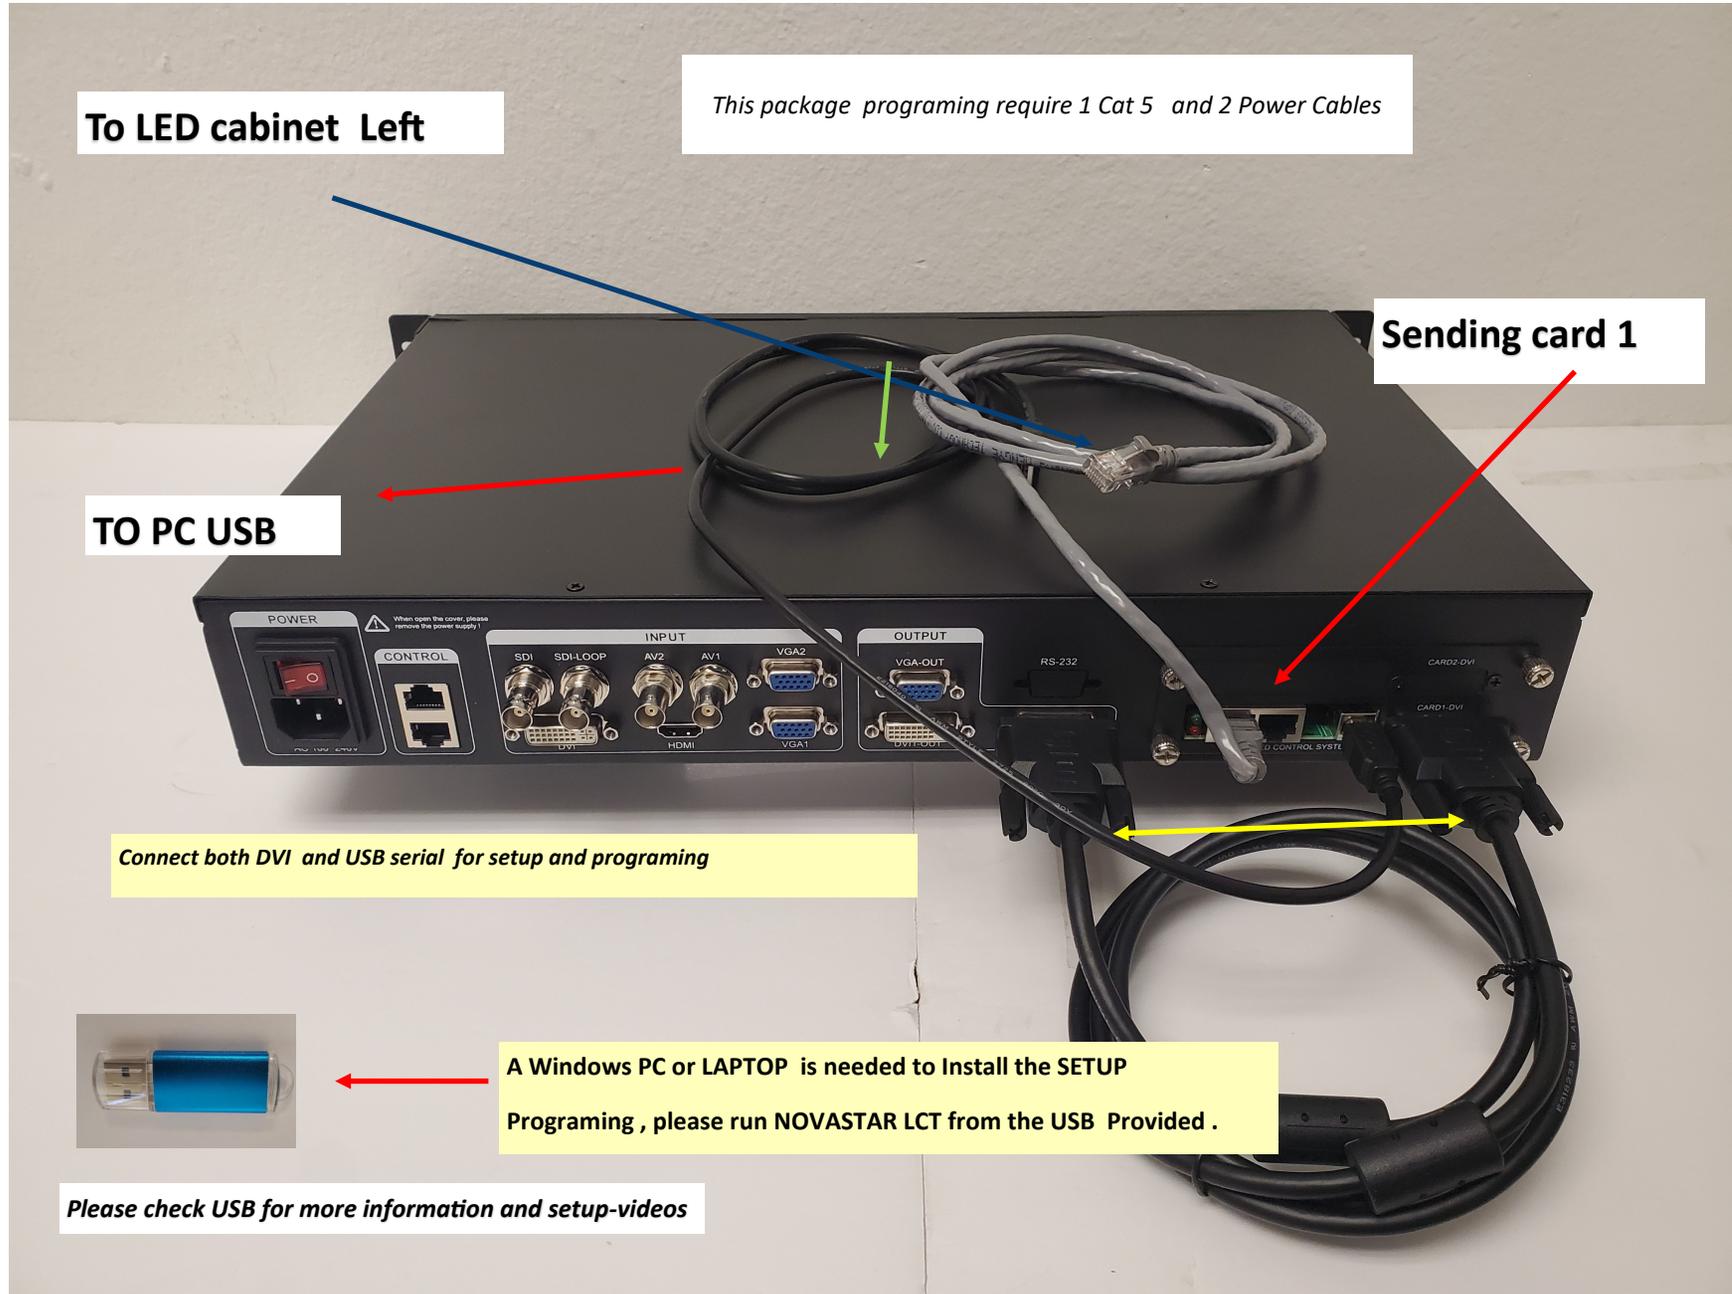

To LED cabinet Left

This package programming require 1 Cat 5 and 2 Power Cables

Sending card 1


TO PC USB

Connect both DVI and USB serial for setup and programming



A Windows PC or LAPTOP is needed to Install the SETUP Programming , please run NOVASTAR LCT from the USB Provided .

Please check USB for more information and setup-videos

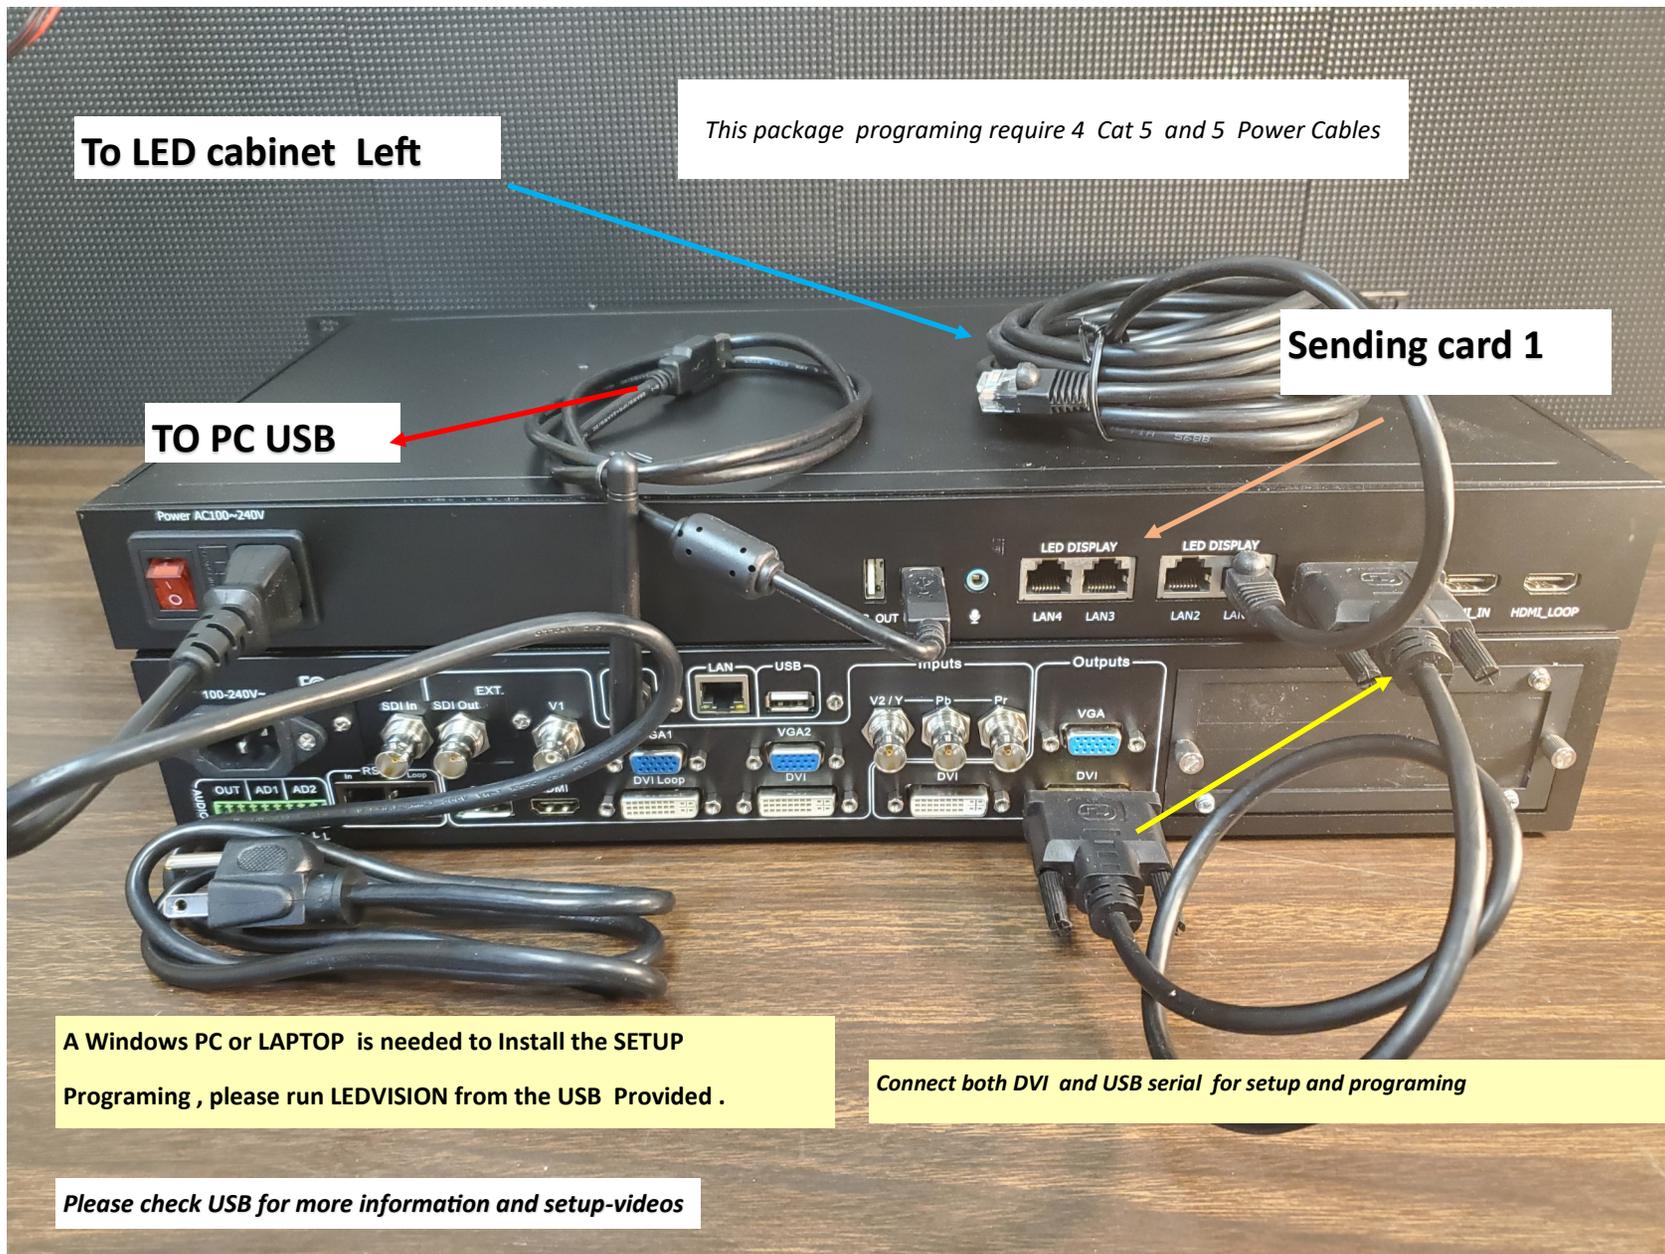

To LED cabinet Left

This package programming require 4 Cat 5 and 5 Power Cables

TO PC USB

Sending card 1

A Windows PC or LAPTOP is needed to Install the SETUP Programming , please run LEDVISION from the USB Provided .

Connect both DVI and USB serial for setup and programming

Please check USB for more information and setup-videos



Video Processor 909 Settings

Hallelujah Plus 9x5 using 2 DVI P2.5

Select Output Image in 909—then Put the total LED resolution , then select OUT1/OUT/2OUT/3/OUT4

	OUTPUT IMAGE DVI-1	Sender DVI 1
2.1	LED total width	2304
2.2	Led total Height	1280
2.3	Output Port	Out 1
2.4	Unit width	1536
2.5	Unit Height	1280
2.6	Unit H start	0
2.7	Unit V start	0
2.8	Auto calculation	OK

	OUTPUT IMAGE DVI-2	Sender DVI 2
2.1	LED total width	2304
2.2	Led total Height	1280
2.3	Output Port	Out 2
2.4	Unit width	768
2.5	Unit Height	1280
2.6	Unit H start	1536
2.7	Unit V start	0
2.8	Auto calculation	OK

	OUTPUT IMAGE DVI-3	Sender DVI 3
2.1	LED total width	
2.2	Led total Height	
2.3	Output Port	
2.4	Unit width	
2.5	Unit Height	
2.6	Unit H start	
2.7	Unit V start	
2.8	Auto calculation	

	OUTPUT IMAGE DVI-4	Sender DVI 4
2.1	LED total width	
2.2	Led total Height	
2.3	Output Port	
2.4	Unit width	
2.5	Unit Height	
2.6	Unit H start	
2.7	Unit V start	
2.8	Auto calculation	