


40'x20' 3.9 128x256 Cabinet

Quick Repair WP-3.940x20P

When Testing cabinets in a video-wall disconnect all the CAT 5 Please be aware of the LIVE 220/100 Volts circuit

1.- Check for GREEN led in power supply , if LED is not lit, check for 220/110 Switch, the switch should be in 110/115.

If Led is off, replace power supply.

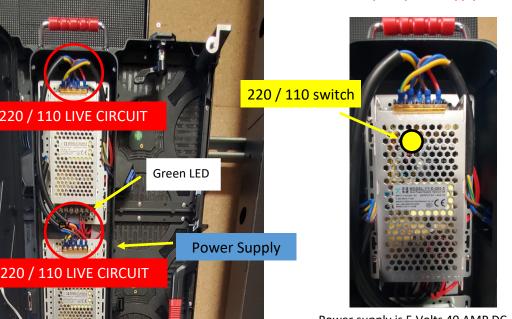


Data Cables

Power supply is 5 Volts 40 AMP DC

If the Receiving card is Replaced please be sure that the bottom don't touch the metal, otherwise will short the circuit

Also the receiving card needs to be programmed with Colorlight software.





3.- To replace Modules, please disconnect power, there's 10 Philips screws. Also the modules are LEFT and RIGHT, check the sticker color near the data connector.